


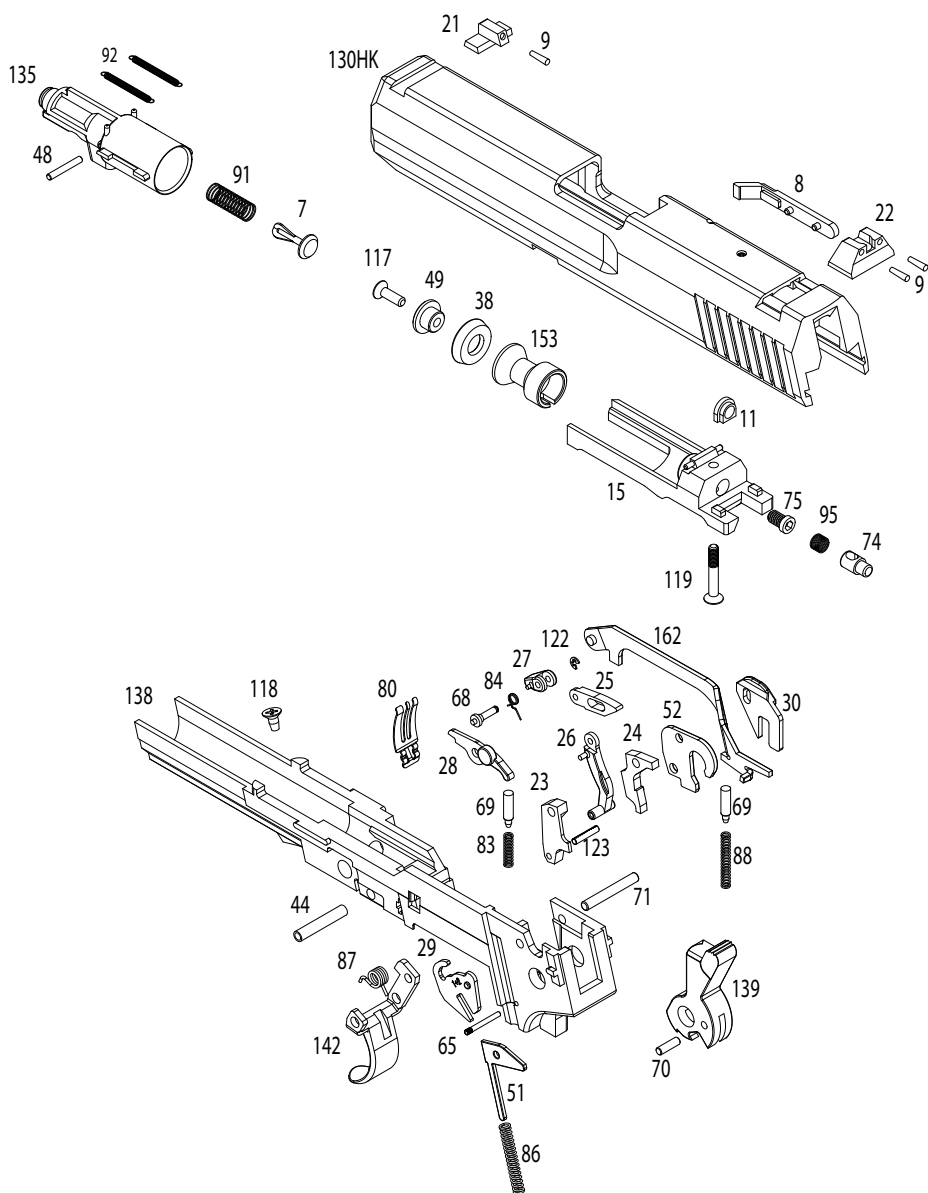




H&K USP PARTS LIST

Parts #	Description	Parts #	Description	Parts #	Description
199-0103-7	JET NOZZLE	199-0103-75	PISTON BASE SCREW	199-0103-140	SAFETY LEVER
199-0103-8	EXTRACTOR	199-0103-80	SEAR SPRING	199-0103-141	SLIDE CATCH LEVER
199-0103-9	SIGHT INSERTS x 3	199-0103-82	HAMMER STRUT LOCKING PIN	199-0103-142	TRIGGER
199-0103-11	INNER BARREL RETAINING RING	199-0103-83	RESET LEVER PLUNGER SPRING	199-0103-143	INNER BARREL HOUSING
199-0103-12	HOP-UP CYLINDER	199-0103-84	IMPACT BLOCK SPRING	199-0103-144	INNER BARREL CLAMP
199-0103-13	HOP-UP CYLINDER CLAMP	199-0103-85	SLIDE STOP SPRING	199-0103-145	INNER BARREL BASE
199-0103-15	BREACH	199-0103-86	SAFETY LEVER SPRING	199-0103-149	RECOIL SPRING SPACER (LARGE)
199-0103-17	SAFETY LEVER SLEEVE	199-0103-87	TRIGGER SPRING	199-0103-150	RECOIL SPRING SPACER (SMALL)
199-0103-21	FRONT SIGHT	199-0103-88	TRIGGER BAR PLUNGER SPRING	199-0103-151	RECOIL SPRING DIVIDER
199-0103-22	REAR SIGHT	199-0103-89	MAGAZINE CATCH SPRING	199-0103-152	MAIN SPRING HOUSING PIN
199-0103-23	LEFT SEAR	199-0103-91	JET NOZZLE SPRING	199-0103-153	MAIN SEAL BASE
199-0103-24	RIGHT SEAR	199-0103-92	CYLINDER RETURN SPRINGS x 2	199-0103-154	INNER BARREL
199-0103-25	IMPACT BLOCK BAR	199-0103-95	FIRING PIN SPRING	199-0103-155	RECOIL SPRING GUIDE
199-0103-26	IMPACT BLOCK BASE	199-0103-116	BARREL CLAMP SCREW	199-0103-162	TRIGGER BAR
199-0103-27	IMPACT BLOCK	199-0103-117	MAIN SEAL CAP SCREW	199-0103-163	HAMMER STRUT
199-0103-28	RESET LEVER	199-0103-118	INNER FRAME SCREW	199-0103-164	SERIAL NUMBER PLATE
199-0103-29	SAFETY LEVER PLATE	199-0103-119	BREACH SCREW	199-0103-167	HAMMER STRUT SPRING
199-0103-30	SAFETY LEVER RETAINER	199-0103-120	FEED RAMP SCREW	199-0103-168	OUTER RECOIL SPRING (LARGE)
199-0103-32	MAGAZINE CATCH	199-0103-121	RECOIL SPRING RETAINING CLIP	199-0103-169	INNER RECOIL SPRING (SMALL)
199-0103-36	BB FEED RAMP	199-0103-122	IMPACT BLOCK RETAINER		
199-0103-37	HOP-UP BUCKING	199-0103-123	IMPACT BLOCK BASE PIN		
199-0103-38	MAIN SEAL	199-0103-124	RECOIL SPRING DIVIDER PIN		
199-0103-44	TRIGGER PIN SLEEVE	199-0103-125	MAGAZINE CATCH ROLL PIN		
199-0103-45	INNER BARREL BASE PIN	199-0103-126	HOP-UP BALL BEARING		
199-0103-48	JET NOZZLE PIN	199-0103-129HK	FRAME		
199-0103-49	MAIN SEAL CAP	199-0103-130HK	SLIDE		
199-0103-51	SAFETY LEVER BAR	199-0103-131HK	OUTER BARREL		
199-0103-52	RIGHT SEAR PLATE	199-0103-132	MAIN SPRING HOUSING		
199-0103-65	IMPACT BLOCK EXTENSION	199-0103-134	HAMMER STRUT LOCK		
199-0103-68	IMPACT BLOCK PIN	199-0103-135	CYLINDER		
199-0103-69	PLUNGER X2	199-0103-138	INNER FRAME		
199-0103-70	HAMMER STRUT PIN	199-0103-139	HAMMER		
199-0103-71	SEAR PIN				
199-0103-72	TRIGGER PIN				
199-0103-74	FIRING PIN				

H&K USP MAGAZINE DIAGRAM AND PARTS LIST

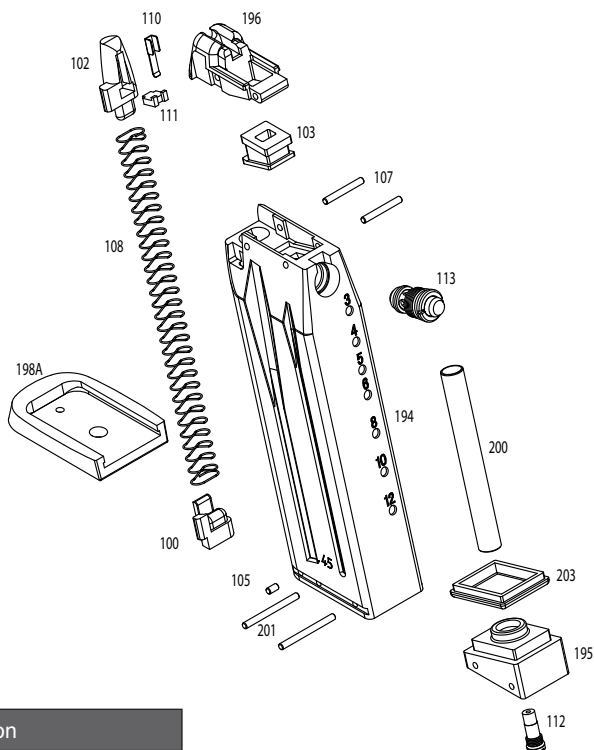

Parts #	Description
199-0103-100	MAGAZINE BASE PLATE LOCK
199-0103-102	MAGAZINE FOLLOWER
199-0103-103	MAGAZINE NOZZLE SEAL
199-0103-105	MAGAZINE BASE LOCK PIN "SMALL"
199-0103-107	MAGAZINE LIP PINS tX 2
199-0103-108	MAGAZINE FOLLOWER SPRING
199-0103-110	MAGAZINE FOLLOWER LOCK SPRING
199-0103-111	MAGAZINE FOLLOWER LOCK
199-0103-112	MAGAZINE CHARGING VALVE
199-0103-113	MAGAZINE RELEASE VALVE
199-0103-194	MAGAZINE BODY
199-0103-195	MAGAZINE BASE
199-0103-196	MAGAZINE LIP
199-0103-198A	MAGAZINE BASE PLATE
199-0103-200	MAGAZINE EXPANSION TUBE
199-0103-201	MAGAZINE BASE PINS X 2
199-0103-203	MAGAZINE BASE SEAL