


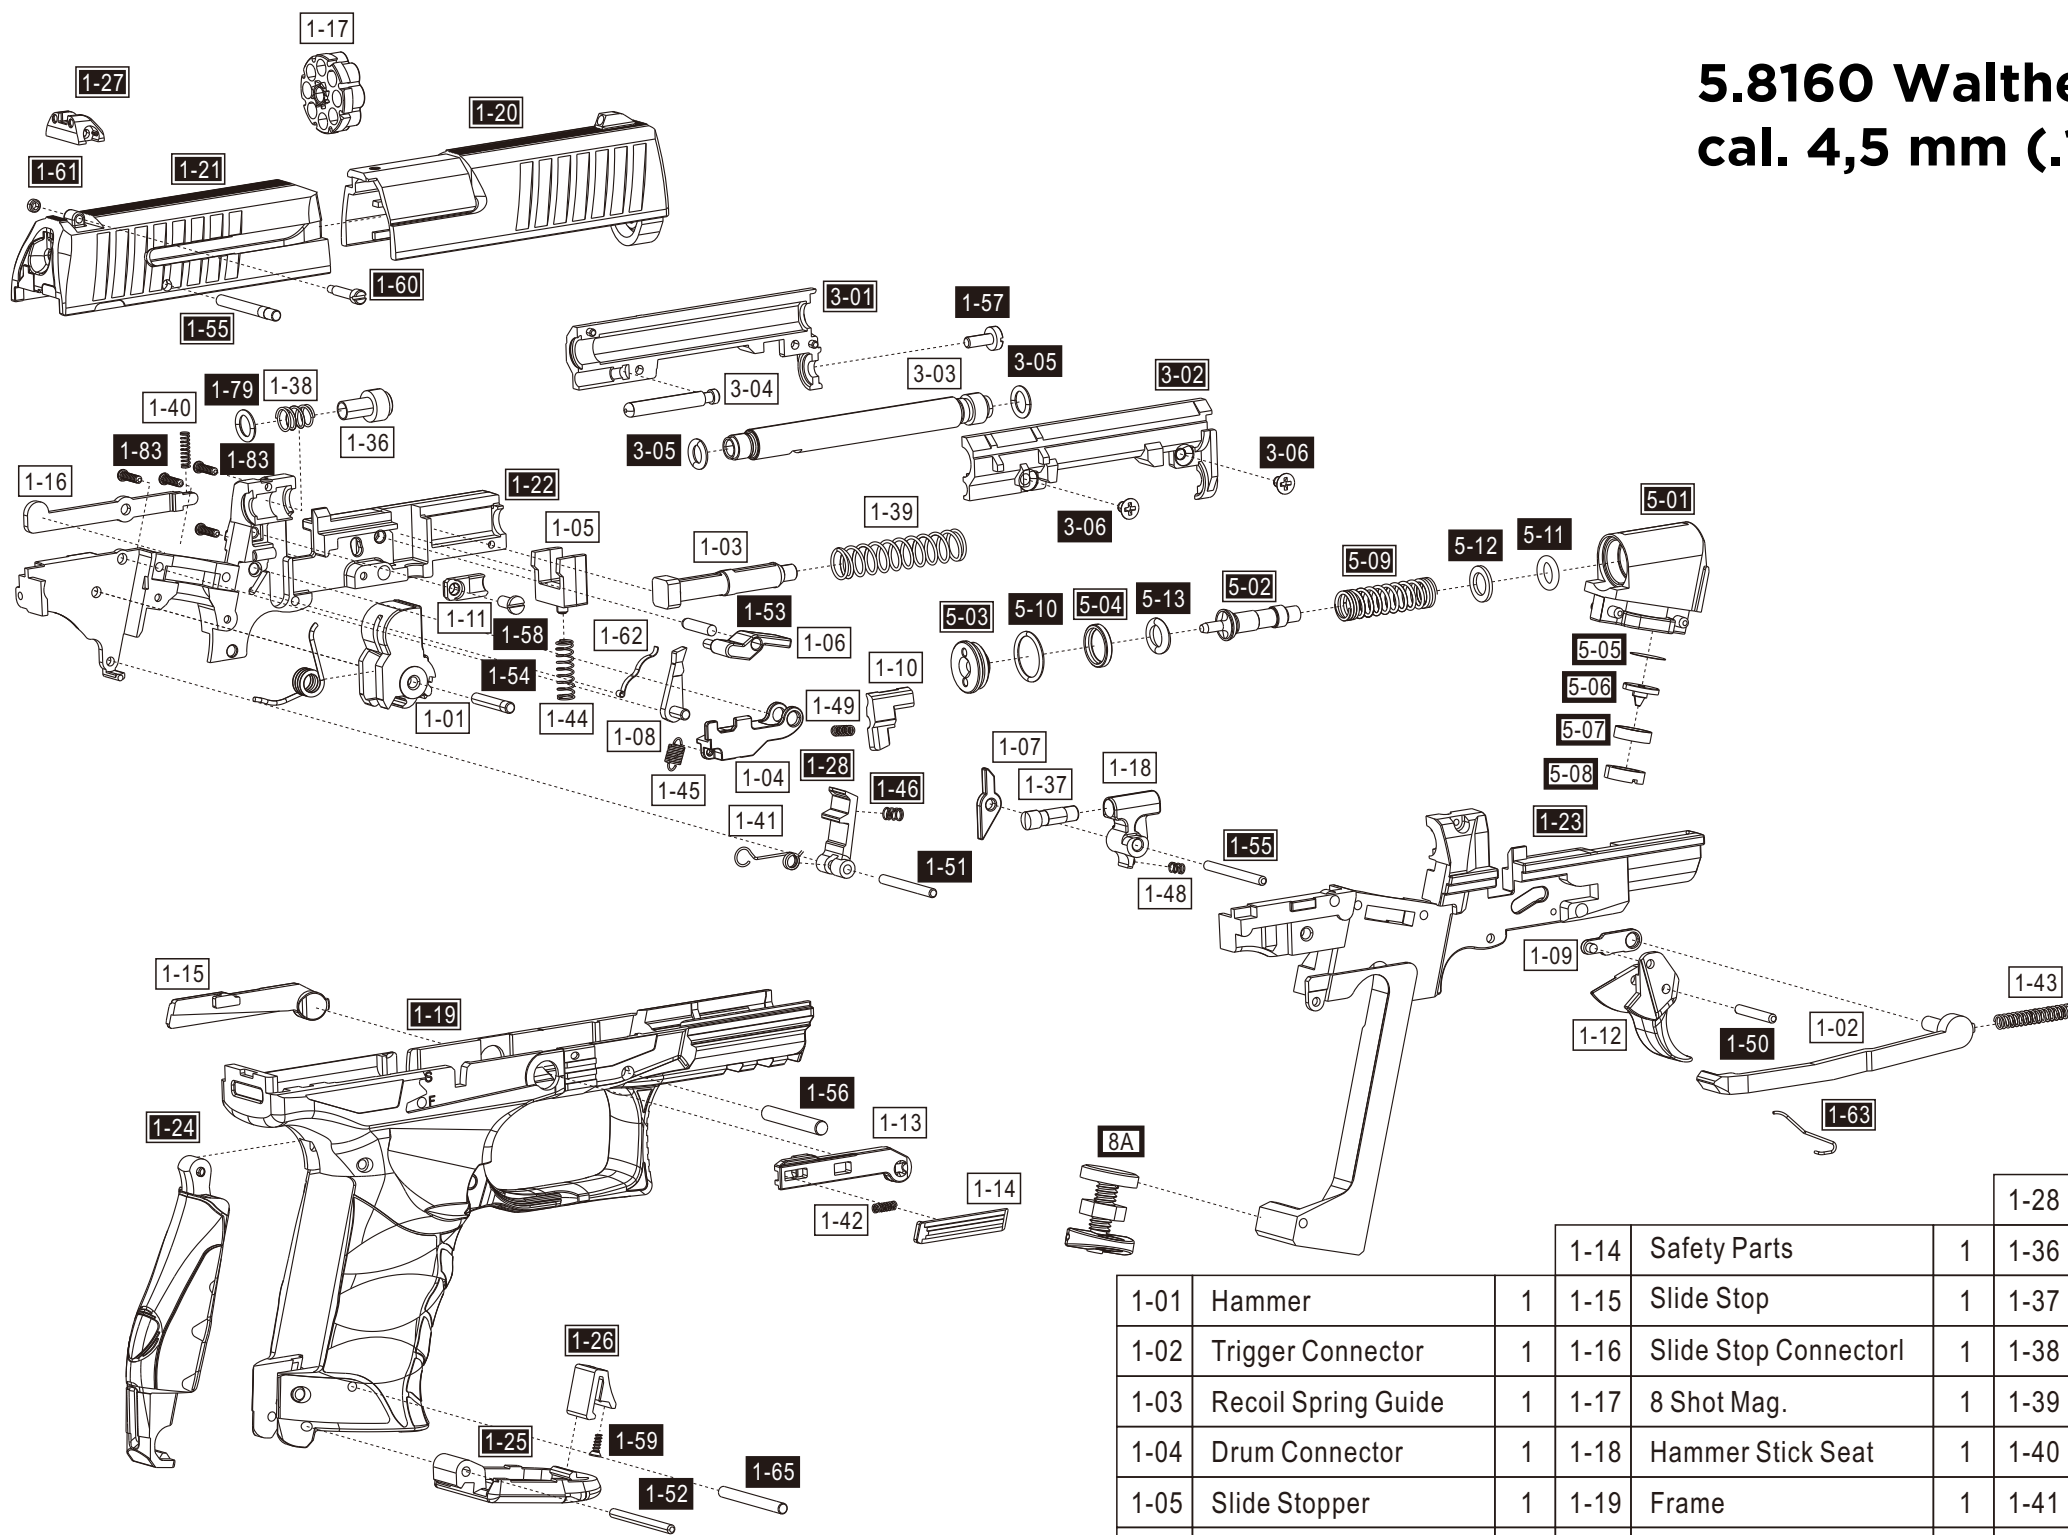

5.8160 Walther PPQ cal. 4,5 mm (.177) CO2

1-01	Hammer	1	1-14	Safety Parts	1	1-28	Hammer Stopper	1	3-05	O-ring	2
1-02	Trigger Connector	1	1-15	Slide Stop	1	1-36	BB Pusher	1	5-01	Chamber	1
1-03	Recoil Spring Guide	1	1-16	Slide Stop Connectorl	1	1-37	Fixing Axis	1	5-02	Valve	1
1-04	Drum Connector	1	1-17	8 Shot Mag.	1	1-38	BB Pusher Spring	1	5-03	Valve Cover	1
1-05	Slide Stopper	1	1-18	Hammer Stick Seat	1	1-40	Mag. Catch Spring	1	5-04	Valve Seal	1
1-06	Holder Parts	1	1-19	Frame	1	1-41	Grip Spring	1	5-05	Filter	1
1-07	Hammer Parts	1	1-20	Slide(Front)	1	1-42	Safety Spring	1	5-06	Piercer	2
1-08	Pushing Parts	1	1-21	Slide(Back)	1	1-43	Trigger Connector Spring	1	5-07	Piercer Seal	1
1-09	Trigger Parts	1	1-22	Body Seat(L)	1	1-44	Slider Stopper Spring	1	5-08	Piercing Level Screw	1
1-10	Fixing Axis Seat	1	1-23	Body Seat(R)	1	1-45	Drum Connector Spring	1	5-09	Valve Spring	1
1-11	Fixing Axis Seat	1	1-24	Grip Cover	1	1-46	Hammer Stopper Spring	1	5-10	O-ring	1
1-12	Trigger	1	1-25	Mag. Base	1	1-47	Hammer Spring	1	5-11	O-ring	1
1-13	Safety	1	1-26	Base Latches	1	1-48	Hammer Stick Seat Spring	1	5-12	Washer	1
			1-27	Sight	1	1-49	Fixing Axis Seat Spring	1	5-13	O-ring	1
									8A	Piercing Level Combination	1

1-50	Axis	1
1-51	Axis	1
1-52	Axis	1
1-53	Axis	1
1-54	Axis	1
1-55	Axis	1
1-56	Axis	1
1-57	Screw	1
1-58	Screw	1
1-59	Screw	1
1-60	Screw	1
1-61	Nut	1
1-62	Spring Chip	1
1-63	Catch Spring	1
1-64	Axis	1
1-65	Axis	1
1-79	O-ring	1
1-83	Screw	4
3-01	Barrel Seat(L)	1
3-02	Barrel Seat(R)	1
3-03	Internal Barrel	1
3-04	Drum Fixing Parts	1
3-05	O-ring	2
3-06	Screw	2