


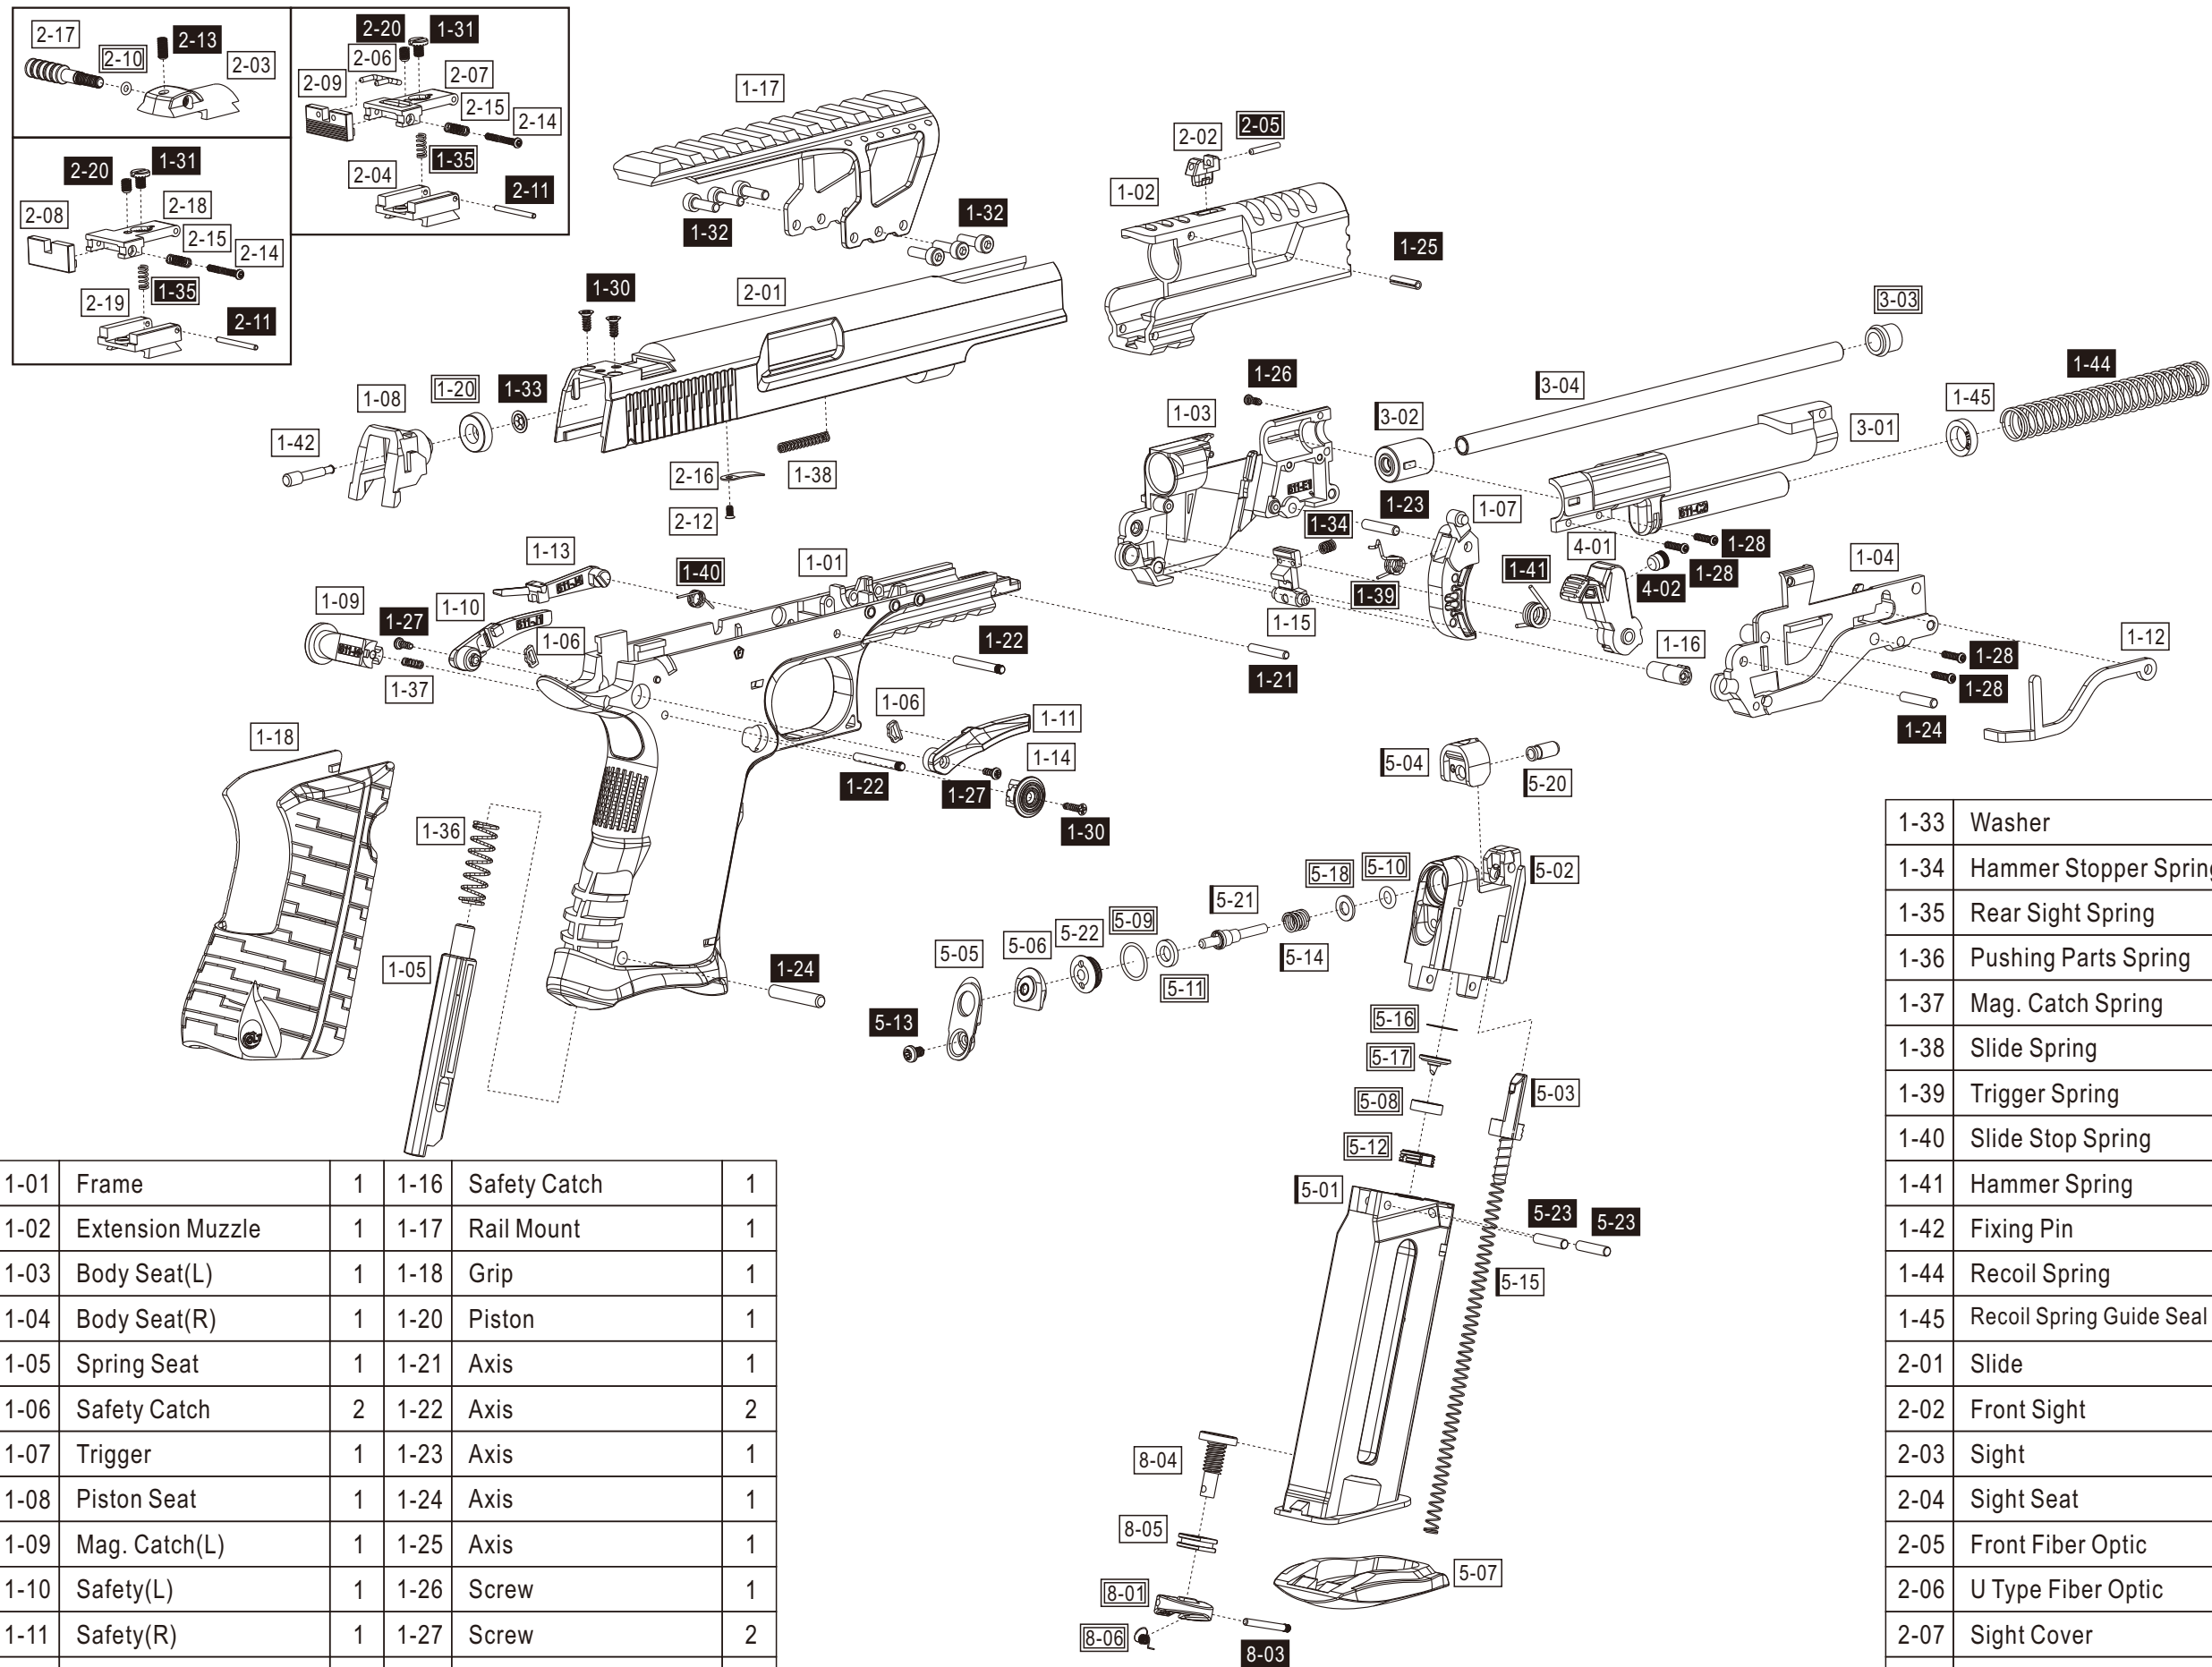

1-01	Frame	1	1-16	Safety Catch	1
1-02	Extension Muzzle	1	1-17	Rail Mount	1
1-03	Body Seat(L)	1	1-18	Grip	1
1-04	Body Seat(R)	1	1-20	Piston	1
1-05	Spring Seat	1	1-21	Axis	1
1-06	Safety Catch	2	1-22	Axis	2
1-07	Trigger	1	1-23	Axis	1
1-08	Piston Seat	1	1-24	Axis	1
1-09	Mag. Catch(L)	1	1-25	Axis	1
1-10	Safety(L)	1	1-26	Screw	1
1-11	Safety(R)	1	1-27	Screw	2
1-12	Trigger Connector	1	1-28	Screw	4
1-13	Slide Stop	1	1-30	Screw	3
1-14	Mag. Catch(R)	1	1-31	Screw	1
1-15	Hammer Stopper	1	1-32	Screw	6

1-33	Washer	1	5-05	Valve Cover	1
1-34	Hammer Stopper Spring	1	5-06	Valve Cover Seal	1
1-35	Rear Sight Spring	1	5-07	Mag. Base	1
1-36	Pushing Parts Spring	1	5-08	Piercer Seal	1
1-37	Mag. Catch Spring	1	5-09	O-ring	1
1-38	Slide Spring	1	5-10	O-ring	1
1-39	Trigger Spring	1	5-11	Seal	1
1-40	Slide Stop Spring	1	5-12	Piercer Fixing Ring	1
1-41	Hammer Spring	1	5-13	Screw	1
1-42	Fixing Pin	1	5-14	Valve Spring	1
1-44	Recoil Spring	1	5-15	Mag. Spring	1
1-45	Recoil Spring Guide Seal	1	5-16	Filter	1
2-01	Slide	1	5-17	Piercer	1
2-02	Front Sight	1	5-18	Washer	1
2-03	Sight	1	5-20	BB Carry Parts	1
2-04	Sight Seat	1	5-21	Valve	1
2-05	Front Fiber Optic	1	5-22	Valve Cover	1
2-06	U Type Fiber Optic	1	5-23	Axis	2
2-07	Sight Cover	1	8-01	Knob	1
2-08	Sight Cover Parts	1	8-03	Axis	1
2-09	Sight Cover Parts	1	8-04	Piercing Level Screw	1
2-10	O-ring	1	8-05	M3 Nut	1
2-11	Axis	1	8-06	Knob Spring	1